

GB Thank you for choosing a HabiStat product. Please read the instructions carefully and refer to diagrams before use. Retain all documents for future reference.

HabiStat

GB FR DE ES IT NL

Humidifier Instruction Manual

Model Numbers: HDH01, HSH01X, HSH01AU

Installation Instructions: fig1

 
 
 
- I Ensure all protective packaging is removed before use.
- II Place the lid on the water tank and insert the flexible hose into the mist outlet on the lid.
- III Install two suckers on the flexible extension hose and stretch to the appropriate length.
- IV Attach the sucker on the side or the back of the terrarium and direct the flexible hose towards the inside. When using with HabiStat Glass Terrariums, turn the outer cap to "ON" and remove. Push the extended humidifier hose through the inner cap. Do not remove the inner cap. Check the hose is secured before operating the humidifier. Please minimize the bending of the extension hose as excessive bending can accumulate water which may damage the fan. fig2
- V Add the humidifier hose cap to the end of the hose that's inside the terrarium – gently squeeze the hose and fit the hose cap over the top.
- VI Add clean water from above the lid or add water quickly after removing the lid.
- VII Plug in and set parameters for the Cycle Time, Working Time and Mist according to your requirements.

- 1 POWER** Turn the power on or off. Once the humidifier is plugged in the machine starts automatically.
- 2 CT (Cycle Time)** Adjusts the frequency of humidification in hours.
- 3 WT (Working Time)** Adjusts the continuous working time of each humidification in minutes. Please note that when the Cycle Time is set to zero the Working Time indicator will go out. If you press the Working Time button, two "beeps" remind you that the operation is invalid.
- 4 MIST** Controls the mist output. Press and hold for three seconds to enter Sleep mode and the screen will power off. Press any key to exit the Sleep mode.
- A Mist Indicator:** Displays current mist output setting via three indicators, representing three different gear positions.
- B Cycle Time Numeric Indicator:** Displays current humidification cycle time via six indicators representing the number of hours.
- C Working Time Numeric Indicator:** Displays current humidification working time via six indicators representing the number of minutes.
- D Humidification status indicator:** The indicator will light up when the humidifier is fogging otherwise it will go out
- E Logo:** This will light up when the power is on.
- F Water Shortage Indicator:** When water levels are too low the indicator will turn red and flash. An alarm will sound which stops after three beeps. Please note that when in Sleep mode only the indicator will flash.

Warning:

- To avoid malfunction only add clean water to the unit and ensure the water temperature does not exceed 40°C.
- Ensure that the humidifier is placed on a flat, firm surface to prevent the unit short circuiting.
- Before connecting the device, confirm the voltage first. It can only be connected to power with 100-240V – 50/60HZ.
- Ensure that the humidifier continuous spraying time does not exceed six hours.
- For indoor use only.
- Clean the tank and base every 2-3 weeks to avoid the build up of limescale. Wipe with a soft, damp cloth with a small amount of white vinegar and rinse with clean water.
- Wipe the limescale on the atomiser plate with a cotton swab and then rinse with clean water.
- Ensure any necessary repairs are carried out by the manufacturer or service agent.
- The manufacturer shall not be responsible for any damage to the product or accidents caused by the user's failure to comply with the requirements listed.

Specifications: Dimensions: 200x162x277mm, **Voltage:** 100-240V – 50/60Hz, **Power:** Max. 25W, **Mist output:** Max. 300 ml/h, **Cycle Time control range:** 0-4 hours, **Working Time control range:** 2-120 minutes, **Noise:** ≤ 35 decibel

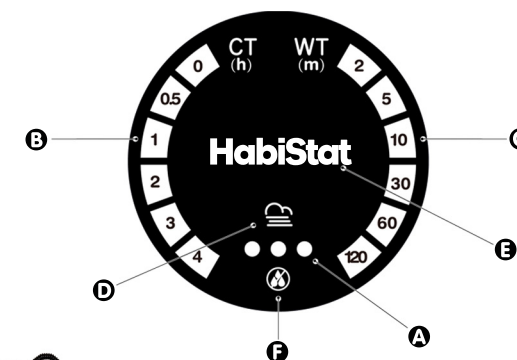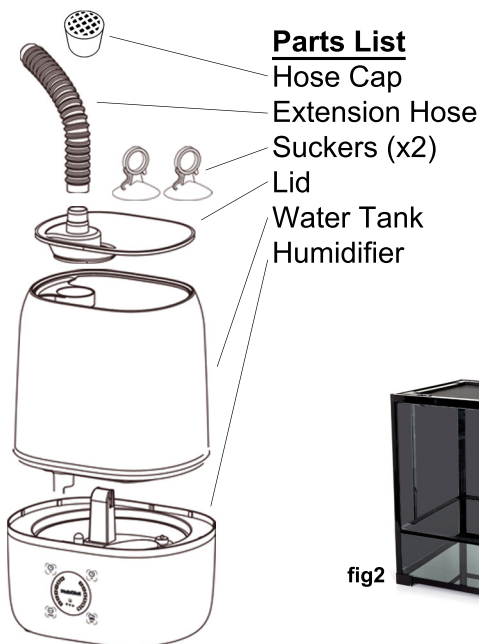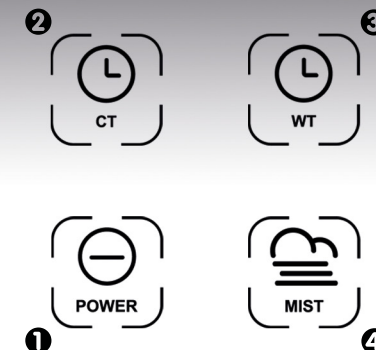

INFORMATION



EU Authorised Representative:
Comply Express Lda StartUp
Madeira, EV 141, Campus da
Penteada, 9020 105 Funchal

Monkfield Nutrition Ltd
Arthur Rickwood Farm,
Chatteris Rd, Mepal, Ely,
Cambs, CB6 2AZ
www.habistat.com
info@habistat.com