

## GB Leopard Gecko Starter Kit Assembly Instructions:

### 1: Build the Terrainium

- Build the flat-packed Terrainium following the supplied instructions.

### 2: Insert the Heat Mat

- Slide the Heat Mat between the two panes of glass at the back of the Terrainium.
- Do not remove the foam insulation from in between the two glass panes. This will help insulate and ensure the heat is directed into the Terrainium.
- Please read the Heat Mat instructions carefully for any additional information.
- Plug the Heat Mat into the socket of the Mat Stat (Thermostat).

### 3: Position the Mat Stat Probe

- Place the Mat Stat probe into the vent cable recess. You will need to remove a tab to fit the probe in.
- The probe should be placed towards the left side of the Terrainium (over the heat mat) to create a temperature gradient within the enclosure.

### 4: Add Substrate

- Cover the bottom of the Terrainium with the substrate.
- Ensure there is only a thin layer of substrate over the position of the heat mat. This helps to avoid excessive heating and keeps the temperature in check.
- Ensure the Mat Stat probe is positioned over the Heat Mat above the substrate. This will help regulate the surface temperature.

### 5: Attach the Mini UVB Kit

- Attach the Mini UVB kit to the inside lid of the Terrainium using the clips that come provided.
- Place the UVB kit cable into another one of the vent cable recesses. You will need to remove a tab to fit the cable in.

### 6: Monitor Temperature

- Plug the Mat Stat into the mains power outlet and set the desired temperature.
- Use the included thermometer provided in the kit to monitor the temperature inside the Terrainium.
- Fix the thermometer probe next to the Mat Stat probe for an accurate reading.
- You may need to adjust the Mat Stat settings until the desired temperature is reached and maintained.

Note: The products enclosed in the kit may vary based on availability, but the basic setup and instructions should remain the same. Please follow all safety guidelines and read the individual instructions provided for each product for proper usage and care of your leopard gecko.

# HabiStat

## Leopard Gecko Starter Kit




HSLGSKI


### CONTENTS\*



Terrainium  
61 x 38 x 30cm  
(24 x 15 x 12")

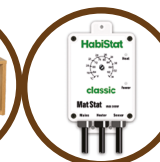

Mat Stat 300 Watt

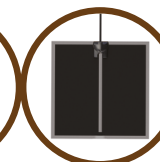

Heat Mat  
28 x 28cm  
(11 x 11") 12 Watt




Mini UVB Kit, 7%UVB  
ShadeDweller Lamp, 8W



Leopard Gecko  
Bedding 5 kg



Plastic Hide

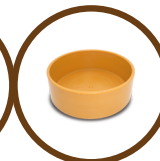

Water Bowl



Coconut Cave x 2



Calcium Dish



Thermometer




Pure Calcium



Repton



Insecta Snack

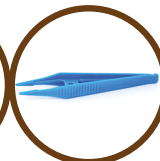

Feeding Tongs

Monkfield Nutrition Ltd, Arthur Rickwood Farm, Chatteris Road, Mepal, Ely, Cambs, CB6 2AZ [www.habistat.com](http://www.habistat.com) [info@habistat.com](mailto:info@habistat.com)

\*Contents may vary